

## Flailhead Hose Attachment

All heads with gear motors

With the flailhead attached to the machine the hydraulic hoses can now be connected – refer to diagrams opposite. Upper port 'A' on the motor connects to junction bracket point 'A' on the arm and lower port 'B' on the motor connects to junction bracket point 'B' on the arm.

**Note:** If a hose tray is already fitted to the arm it will need to be removed to allow the hoses to be connected to the junction bracket – ensure the hose tray is replaced once the hoses have been connected.

